



Gosdarjeva
koča
Rimske Toplice

INSTRUCTIONS

THE VARIES USES OF THE FORESTER'S HUT ABOVE RIMSKE TOPLICE

WE POLITELY ASK YOU TO CONSISTENTLY FOLLOW THE INSTRUCTIONS IN ORDER TO REDUCE THE POSSIBILITY OF FAILURES.

FOR FURTHER ASSISTANCE, YOU CAN CALL +386 (0) 30 210 410.

1. **JACUZZI**

Before use: everybody takes a shower without soap.

- Open the cover and place it on the north side of the jacuzzi on the edge of the wood
- To switch on: you press the MODE button → press STANDARD → press WARM and select the desired temperature between 33 °C and 35°C.
- Blower, Light, Jets 2 keys are available for use.

Enjoy ☺

After use: everyone takes a shower with soap, even if you intend to go to the sauna right after

- Set the temperature to 26 °C with the → COOL button.
- Cover the Jacuzzi with the cover.
- Lift the wooden staircase (you can find it before entering the jacuzzi on the south side) and place it in the middle of the cover to protect it from the wind.

In case of error:

• **If it writes FLO there are two possible problems:**

- Not enough water
- Dirty filter

• **If the jacuzzi does not heat the water:**

- Check if you set MODE to Economy instead of Standard during initial setup

2. SAUNA

The sauna can be used in Finnish way.

- Everyone always sits on towels
- One light button is used for both applications
- Always take a shower before use (recommended with colder water for better sauna effects). This instruction applies even if you have been to the Jacuzzi right before.

Turn the sand watch (you find it inside the sauna) and after 10 minutes, turn off the sauna, take a shower, relax and remain still.


Instructions for digital sauna controller CON4

I. Controller (diagram 1)

1. Sauna light switch: Turn on and off the sauna light connected to the controller. The sauna light illuminates when the sauna light is turned on; The sauna light indicator goes out when the sauna light is off.

2. ON/OFF button: turning on and off the controller and also the sauna heater.

Note: The controller automatically enters the A operating mode every time the controller is turned on, the track operation displays the last setting.

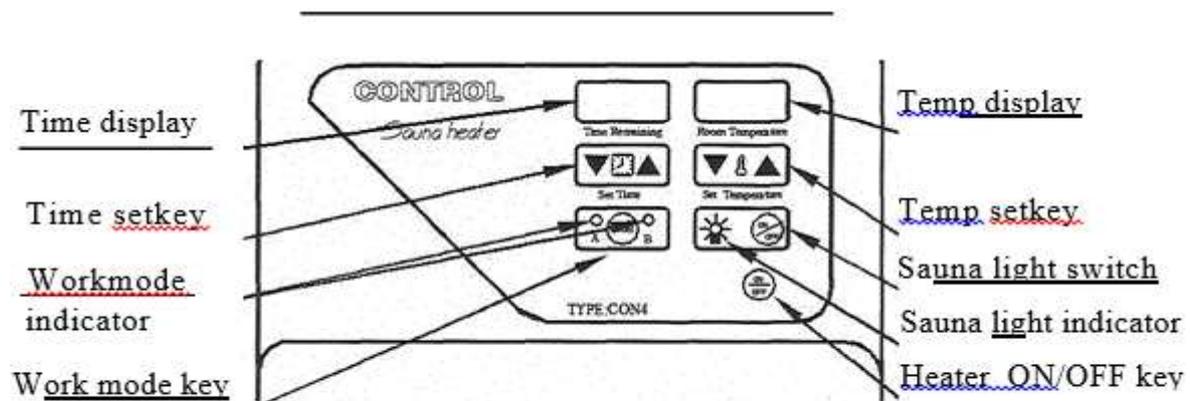

II. Settings (diagram 1)

1. METHOD OF WORK:

Work mode A:

When the indicator light "A" is on, the system is in working mode A. In mode A, it has a standby function. The heating time is up to four hours, and the presetting (waiting) time is up to eight hours. Setting the time in the section 0:30-4:00 allows the heater to start working

immediately without any delay. The time setting in section 1 is from 4:30 to 12:00 so that the heater waits from half an hour to 8 hours and then heats for 4 hours.

For example:

Setting the time to 2:00 means that the heater will heat continuously for 2 hours without any delay.

Setting the time to 6:30 means the heater will wait for 2 and a half hours and then start heating continuously for the remaining 4 hours.

With the delay function, you can delay the activation of the sauna heater for a certain hour.

Work MODE B:

When the "B" indicator light is on, the system is in B mode. In B mode, it has no standby function. The heater heats up instantly for up to 12 hours.

For example:

Setting the time to 6:30 means that the heater will heat continuously for 6 and a half hours without delay.

Note:

- 1) The track adjustment range for mode A and mode B is the same: 0:30 12:00.
- 2) In mode A, the track preset is calculated as (track setting - 4:00), so any track setting less than 4:30 has no preset and the heater will start immediately.
- 3) The displayed tracks count down.

2. Time setting:

Press the rail setting key to change the working rail setting (press up key "A" or down key "f"). The setting will be automatically confirmed 3 seconds after no operation. The display starts to count down with the track setting and the controller will automatically turn off when the countdown is finished and the display will show 0:00. The factory default setting is 2:00.

3. Setting the temperature:

Press the temperature setting key to change the temperature setting (press the up key "A" or the down key "f"). The display flashes and shows the set temperature. The setting will

be automatically confirmed for 3 seconds after no operation, and then the ambient temperature will be displayed. The heater stops heating when the ambient temperature reaches the set temperature. The temperature setting range is 40-105°C (104-221°F), in fact my default set temperature is 75°C (167°F).

Note: The system retains the last settings after switching off the regulator by pressing the ON/OFF button. AH settings are reset to factory defaults if power is lost.

IV. Warning:

This device is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge (including children), unless they have been given supervision or instruction concerning use of the device by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the device.

- Check the sauna before restarting the timer.
- Stop using the sauna heater if the sauna heater is not working properly or if you notice an unusual smell.

3. VACUUM CLEANER

You can find it in the bedroom behind the door.

Attention: vacuuming wet surfaces, vacuuming the fireplace and vacuuming around stoves and fireplaces is not permitted under any circumstances, as there is a high probability of fire.

4. USE OF THE FURNACE IN THE MAIN HOUSE

- First open the chimney → you find the hook (**turn it upwards**) on the back of the chimney
- Then open the lower drawer. You do this with two hooks at the bottom of the furnace. Move them to the right. This is how you open the air supply.
- Stack the small firewood transversely so that there is room below for the heppo cube. Two vertically and the other transversely across these. The firewood should be dry, small and very thin.
- Then place thinner firewood and then thicker firewood on those.
- Light 1 or 2 heppo cubes and place under the small firewood you transversely placed
- Close the furnace
- When it starts to burn, you can close the air supply in the lower drawer. Leave the chimney open.

There is a fan that automatically turns on and off. You can also turn it off - on the left side in the back of the furnace.

5. STOVE IN PARTY BASEMENT

It is in use and the procedures are the same as for the stove in the main house.

6. HOT WATER IN PARTY BASEMENT

Turn on the water heater on the left under the sink.

7. USE OF THE SWEDISH TORCH

You can find them on the terrace. They should be at least 10 meters away from buildings and not too close to the forest. Place them in low grass. Push the heppo cube into the middle with a screwdriver and ignite with a gas lighter.



Enjoy 😊

8. GRILL WEBER

- Use a starter set (shown in the picture). Place one or two heppo cubes on the grill racks and place the starter set on it.
- Put charcoal in it (you find it under the sink). Fill it up to the top.
- Wait 15-20 minutes until all the briquettes light up and start glowing. On top as well.
- Lift the grate and distribute the charcoal evenly for a uniform temperature over the entire surface
- Place the hot starter set on a grass surface to cool
- Baking is always covered



- The temperature is regulated in two places: by the upper vent on the lid (open by rotating in one direction) and by rotating the handle below.

Instructions for the handle below:

- FAR LEFT → closed; the temperature is minimal
- 2 and a half rounds → half power
- RIGHT RIGHT → open; temperature maximal

OIL THE GRILL RACKS FOR OPTIMAL TASTE 😊

After use:

When the grill is still hot, rub and clean it with the brush.

9. GARDEN FIREPLACE

- Remove the cover.
- Lay the thin firewood transversely so that there is room below for the heppo cube. It is recommended to have two vertically and the rest transversely
- First place the thinner and then the thicker firewood
- Light 1 or 2 heppo cubes and place them under the cracks
- You can put the lid back on

After use:

To turn off, use a glove and remove the cover. Also set aside the iron ring and place it on the grass surface. Place the cover back on the garden fireplace to completely stop the air supply. The fireplace can be used at least 10m away from the house and when the weather is not blowing.

10. WATER BOILER IN THE MAIN HOUSE

It is located in the bathroom behind the door on the right.

- From **0** → (turn the key) to **e** for ignition
- Then step out of the bathroom and press the middle light button
- The red light on the boiler should light up
- When you leave, you set the boiler to eco mode

11. LOCKING

When leaving, lock all facilities. A special feature is on the door of the Party Basement. The door handle has to be turned upwards, strongly.

12. GARBAGE

You dispose of garbage at the garbage dump located at the following coordinates: 46°10'15"N 15°10'40"E, or on the way from the Forester's hut, you will find the nearest garbage dump about 10 minutes away on the right in the forest about 3 km away.

Directions to the location can be found on the link:

<https://goo.gl/maps/1vsj8Q2fsbqkV3gw6>

We wish you a pleasant stay on our property and in this wonderful nature 😊